


SIMON®

14 LED UV Blacklight Flashlight Instructions

Part# SUVFL7114110813

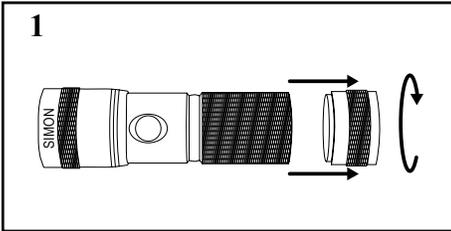


Insert 3 AAA Batteries by unscrewing the rear end Cap and removing the battery cage. Make sure that when you place the 3 AAA Batteries that they are **FULLY CHARGED**.

My Recommendation is to buy Rechargeable AAA batteries from Amazon and a New Charger. We have tested these items from Amazon with great results:

Battery Charger


<http://www.amazon.com/gp/product/B000RSOV50/>

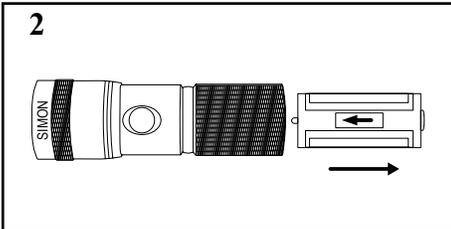


Amazon Rechargeable AAA Batteries

<http://www.amazon.com/gp/product/B00CWNMXQW/>


NOTE: We have purchased AAA Alkaline Batteries from Hardware Stores, Drug Stores, and Super markets and found several of the brand NEW batteries to be low in charge and/or dead in rare instances. Batteries start losing their charge immediately after the have been removed from a charger. We recommend to use lithium ion or Ni-Mh for consistent run times.

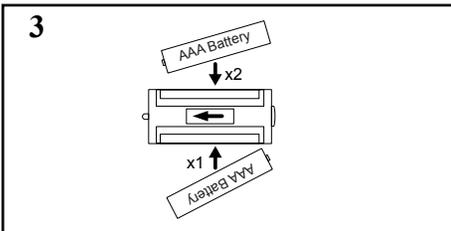


Then insert the batteries into the cage correctly - 2 of the AAA Batteries go in the battery cage one way and the third one goes in the other.

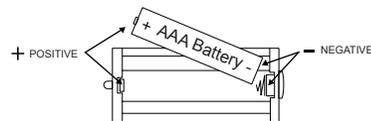


Be sure the Negative side of the battery touches the Spring in the battery cage and the Positive touches the flat Metal Plate on the opposite side.

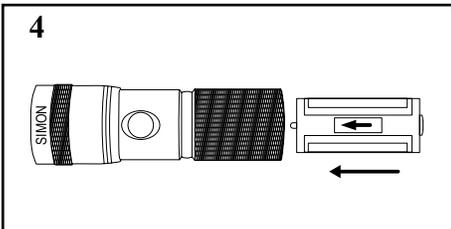

Make sure you place the battery cage in the Flashlight correctly with the 2 positive connections on the batteries pointing towards the front of the flashlight. There should also be a white sticker with RED arrow on the Battery cage, Point that arrow towards the front of the flashlight.

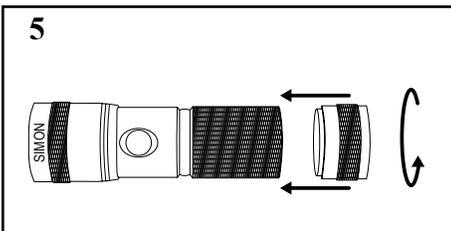

Screw the Rear End Cap Back On.

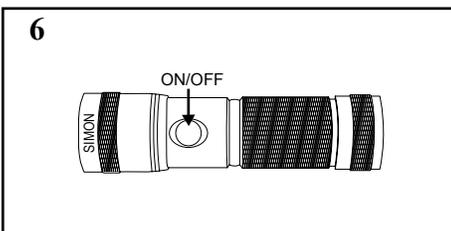

Turn the flashlight On/Off by Pressing the Switch ALL THE WAY DOWN. Then go into a room that you feel has pet urine stains and turn off the lights. The UV Blacklight works best in black out conditions. Point the UV flashlight at the infected areas and you will see discoloration under the UV Blacklight Flashlight.

Turn Off flashlight by Pressing the Switch ALL THE WAY DOWN.